

EcoKeeper Watcher

Operation Manual

December 25, 2018

J A V A S Y S

Table of Contents

1 Overview	2
1.1 Operating environment	2
1.2 Specification	2
1.3 Install / Uninstall	3
1.3.1 How to Install	3
1.3.2 How to Uninstall	6
1.4 About the device configuration.....	7
2. User operation.....	10
2.1 Main screen	10
2.1.1 Name of each part	11
2.1.2 Select display date	11
2.1.3 Analysis graph	12
2.2 Menu bar items	13
2.2.1 File.....	13
2.2.2 History.....	14
2.2.3 Settings	15
2.2.4 Config	16
2.2.5 Hard Copy of Screen.....	25
2.2.6 Send Test Mail(Optional function)	26
2.3 Changing graph display in graph display	27
Appendix 1 . About specification of COM port	29

1 Overview

This manual explains how to use the EcoKeeper management software.

1.1 Operating environment

タイプ	項目	内容
Software	OS	Windows 7 or later
Hardware	CPU	Windows7 or better works comfortably
	Memory	2 G B or more
	HDD	*1 Free space: 5 GB or more

*1 : It varies depending on the amount of data to be saved.

*2 : Connecting with EcoKeeper It corresponds only to the version of Windows on which the USB - RS 485 conversion cable operates.


1.2 Specification

This software works with NETFRAMEWORK 2.0 or later.

1.3 Install / Uninstall

1.3.1 How to Install



When installing the CD-ROM or USB memory in the drive, the installer starts up automatically.
(If it do not start, please double-click "setup.exe" in the CD-ROM folder.)
The setup screen will appear and then click "Next".

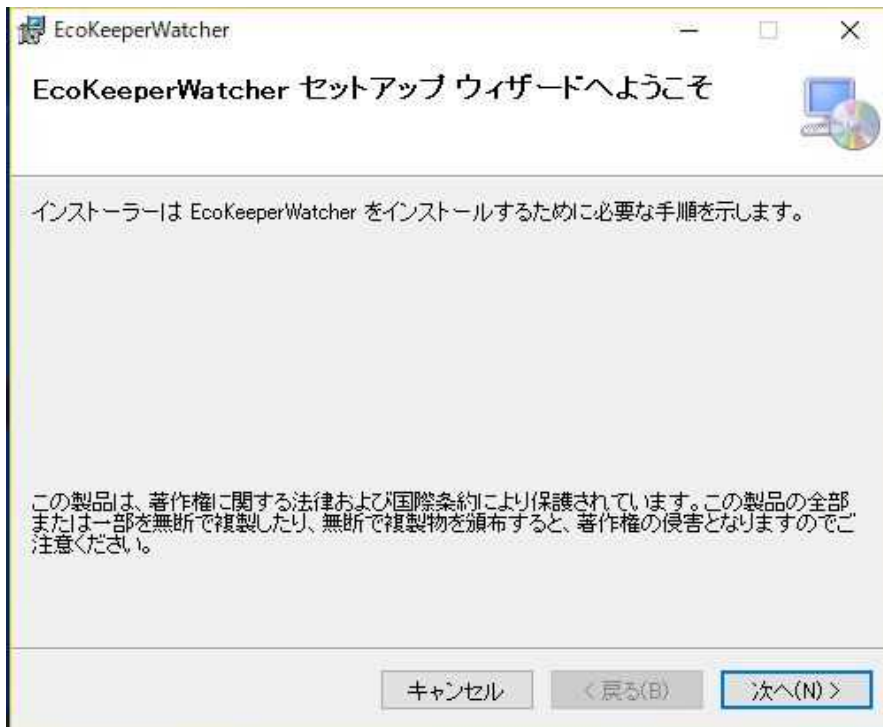

Note)


If this software or previous version of this software is already installed,
You need to do uninstall in advance.

To set up the folder for setting up this software to the default location click "Next". To change from the default location, click "Browse (R)" and select any place. And then please specify, then click "Next".

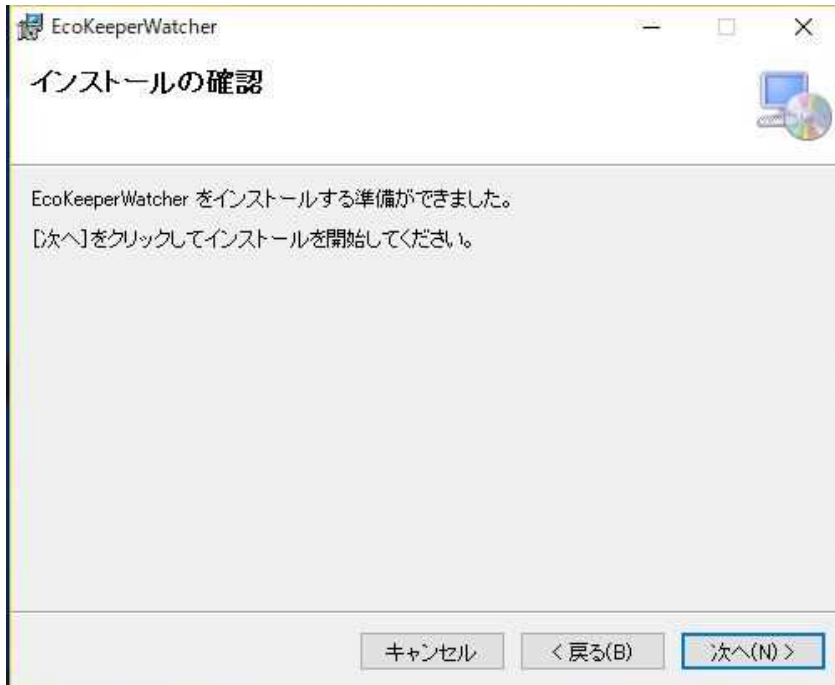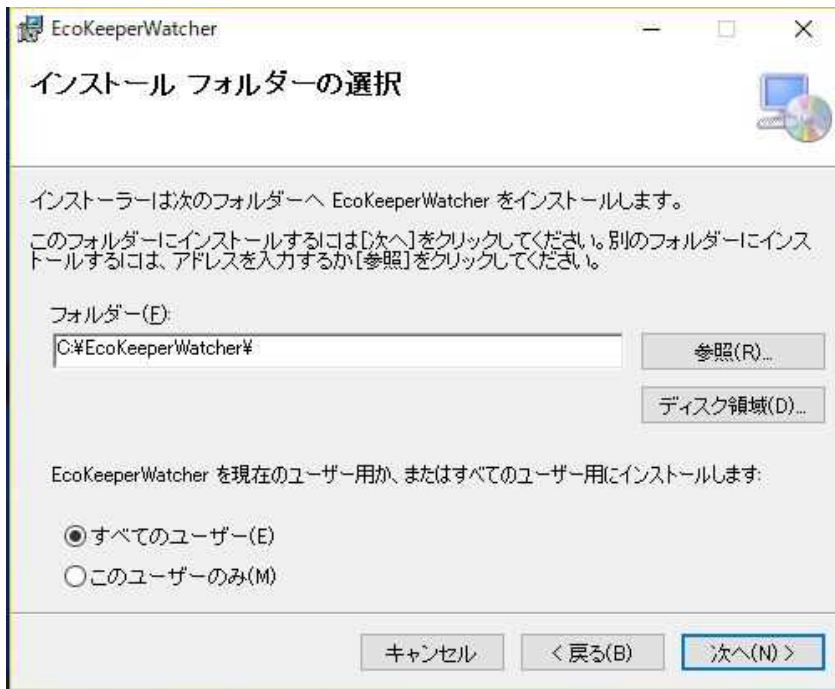


At this point, click "Next" to start the installation work.

The installing screen is displayed as shown below.

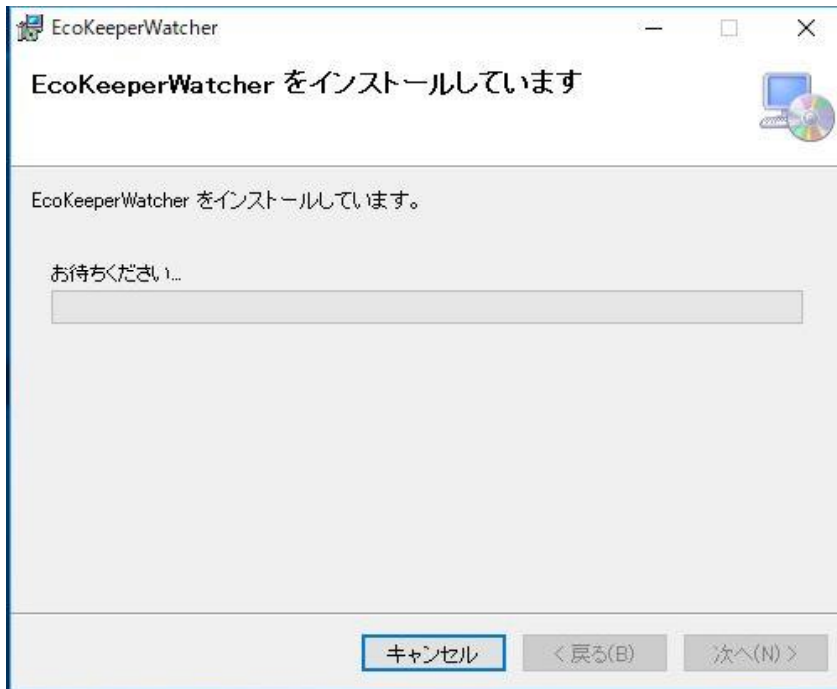

This screen takes about 1 to 2 minutes.

Please click "Yes" in response to the permission request to change the device on the security screen.

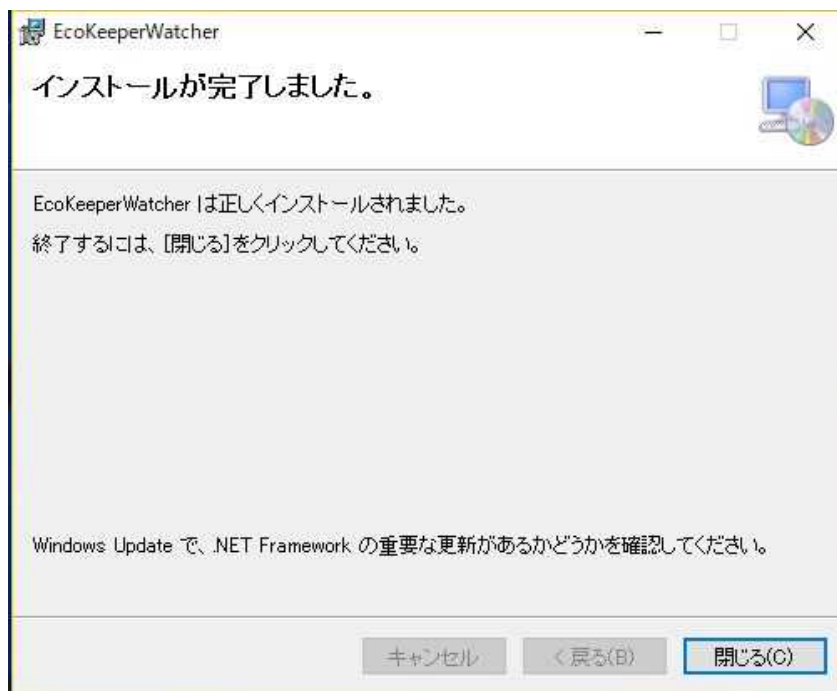

The installation work will be completed with the above screen display.

1.3.2 How to Uninstall

Double-click "Add / Remove Programs" in Windows Control Panel.
Please select "EcoKeeperWatcher" and click "Add / Remove" button.
Then please follow the instructions on the screen.
This completes uninstallation.


1.4 About the device configuration

EcoKeeperWatcher manages one set of EcoKeeper systems on the Windows version. One set indicates one EcoKeeper and up to two Power Meters. The electric Power Meter corresponding to this software is Panasonic's Eco Power Meter. EcoKeeper and Eco-Power Meter are connected by RS485 via USB and RS-485 conversion connect cable.


(There is also a configuration to connect the Eco-Power Meter via DLL (Data Logger Light))

The equipment configuration is as follows.

(1) Connect between PC-EcoKeeper & EcoPowerMeter with RS485

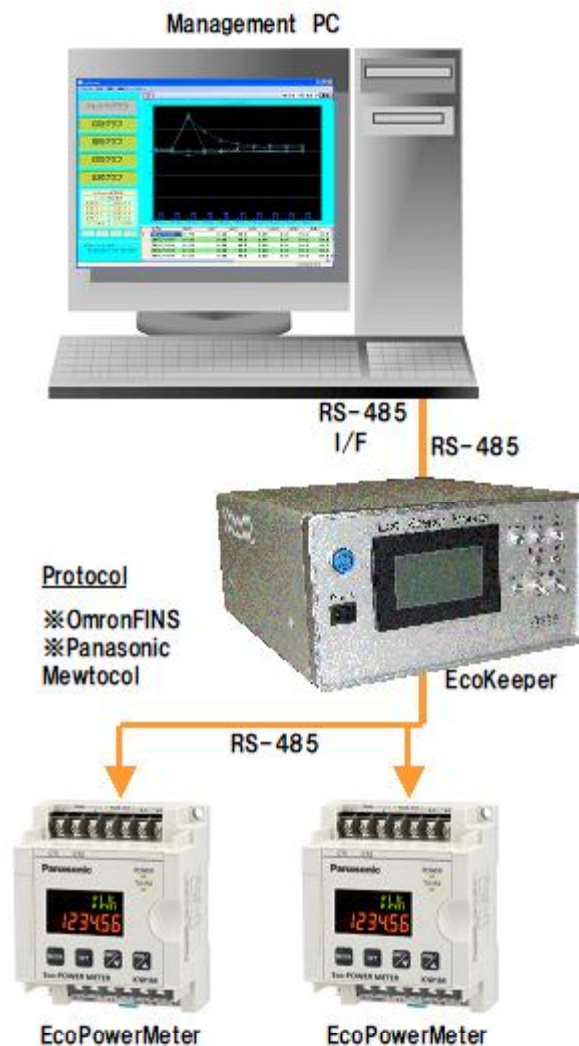

(2) Connect between PC-EcoKeeper & EcoPowerMeter with RS485 & Ether (DLL)

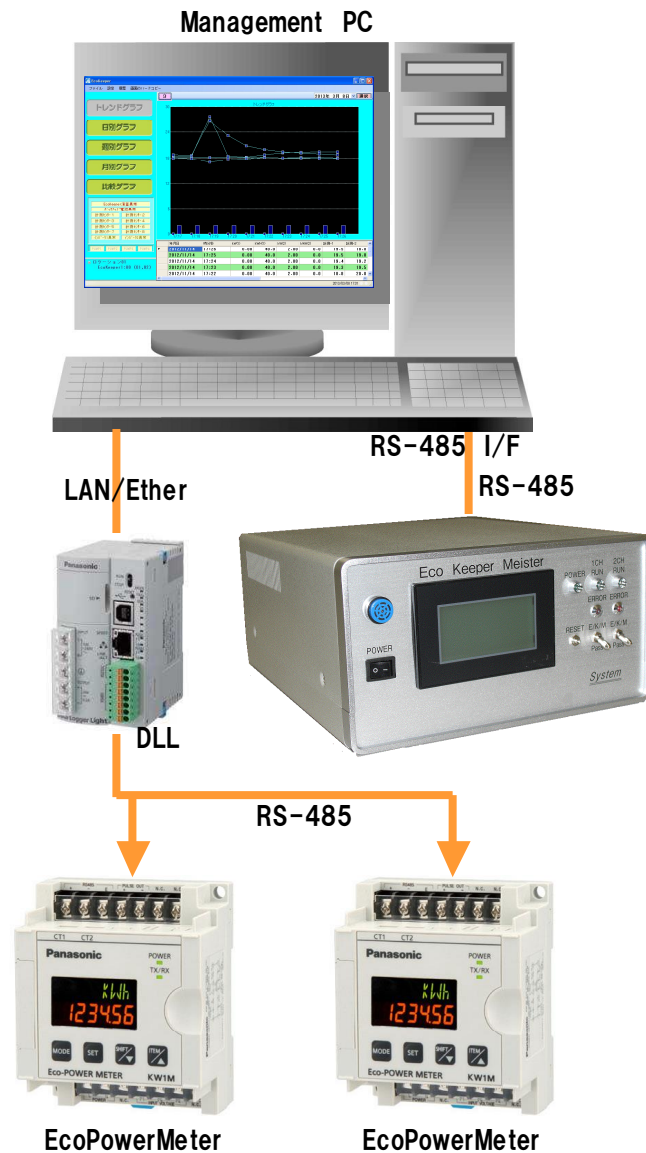


With this connection, even when the PC power is off,
the Instantaneous Value and the Integrated Value of the electric Power Meter
are saved in DLL (data logger light).
(Recorded / saved data into SD card.)
The data that can be stored depends on the SD card capacity.

Example of USB-RS 485 conversion cable (UTS-485TB-V2)



2. User operation

2.1 Main screen

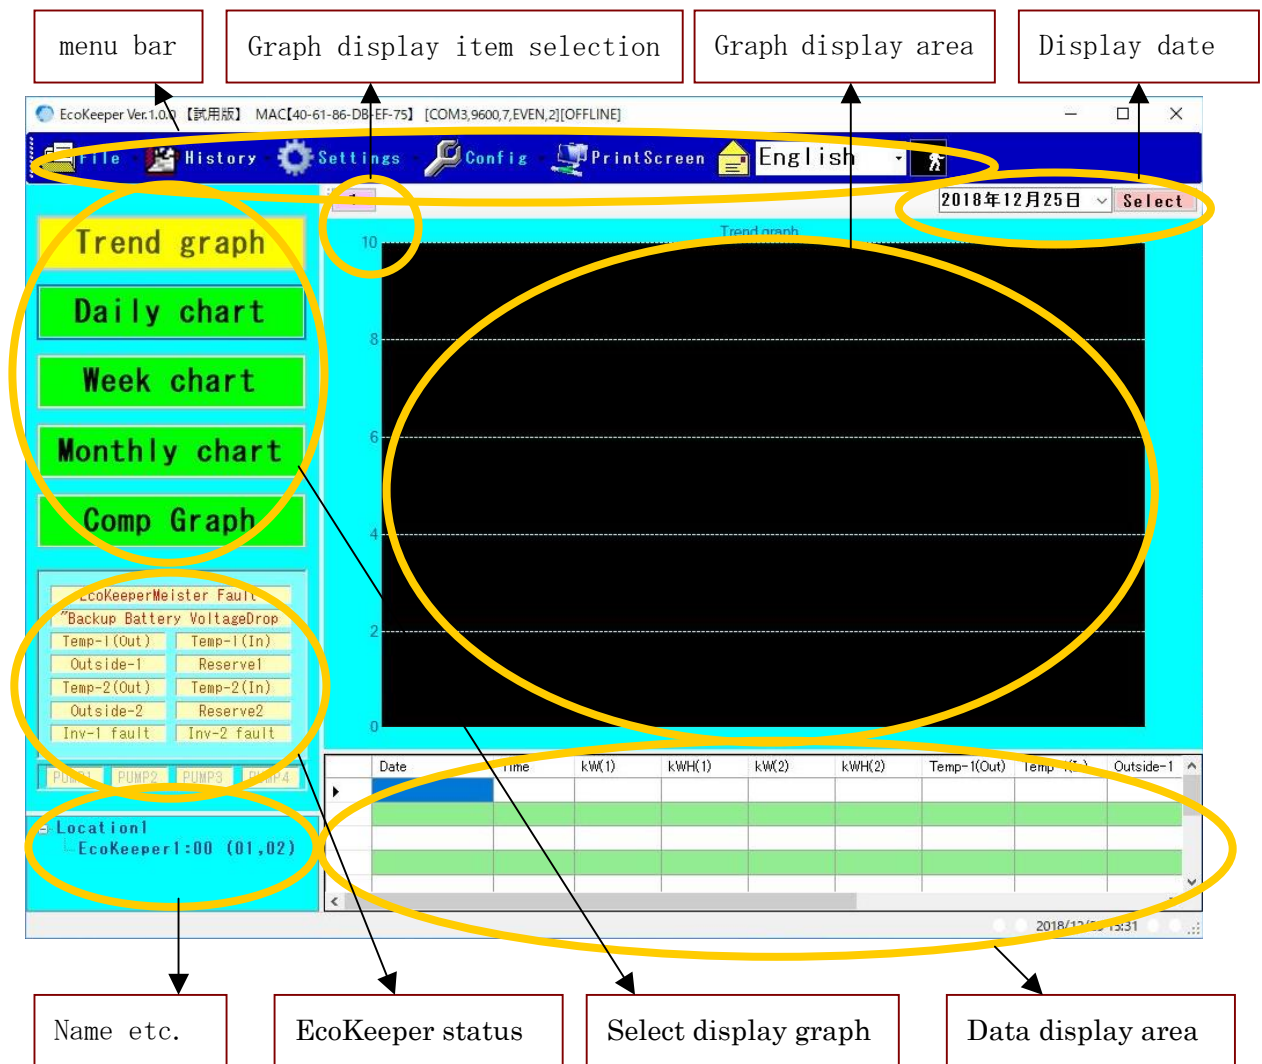


2.1.1 Name of each part

Menu Bar	By clicking the mouse, various settings, online mode, hard copy of screen can be used.
Graph display item selection	By clicking the mouse, it is possible to select the display of "1" - "4" in four stages.
Graph display area	Display the graph.
Display date.	Information / Analysis Select the target date for the graph.
Name etc.	The name set in the location master will be displayed
EcoKeeper status	Display various status of EcoKeeper. EcoKeeper and electricity PowerMeter data are collected every minute for this program in online mode, and the acquired EcoKeeper status and driving status are displayed here.
Select display graph	Trend graph, daily, weekly, monthly, and comparison graphs are switched, and corresponding graphs are displayed in the graph area accordingly.
Data display area	Data corresponding to the graph display area is displayed.

2.1.2 Select display date

When you press "▼" on the display date, the following calendar is displayed.


When you select a date and press the select button, data of the specified date is displayed on the graph display area.

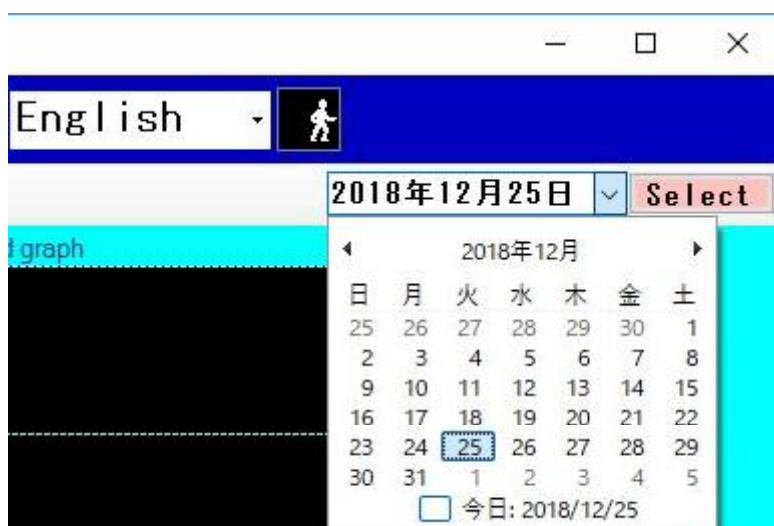

2.1.3 Analysis graph

Graphically display the value of the item selected by date (today's date at startup).
In case of Trend Graph, display the value acquired every 1 minute in real time.

(Example of graph displayed)

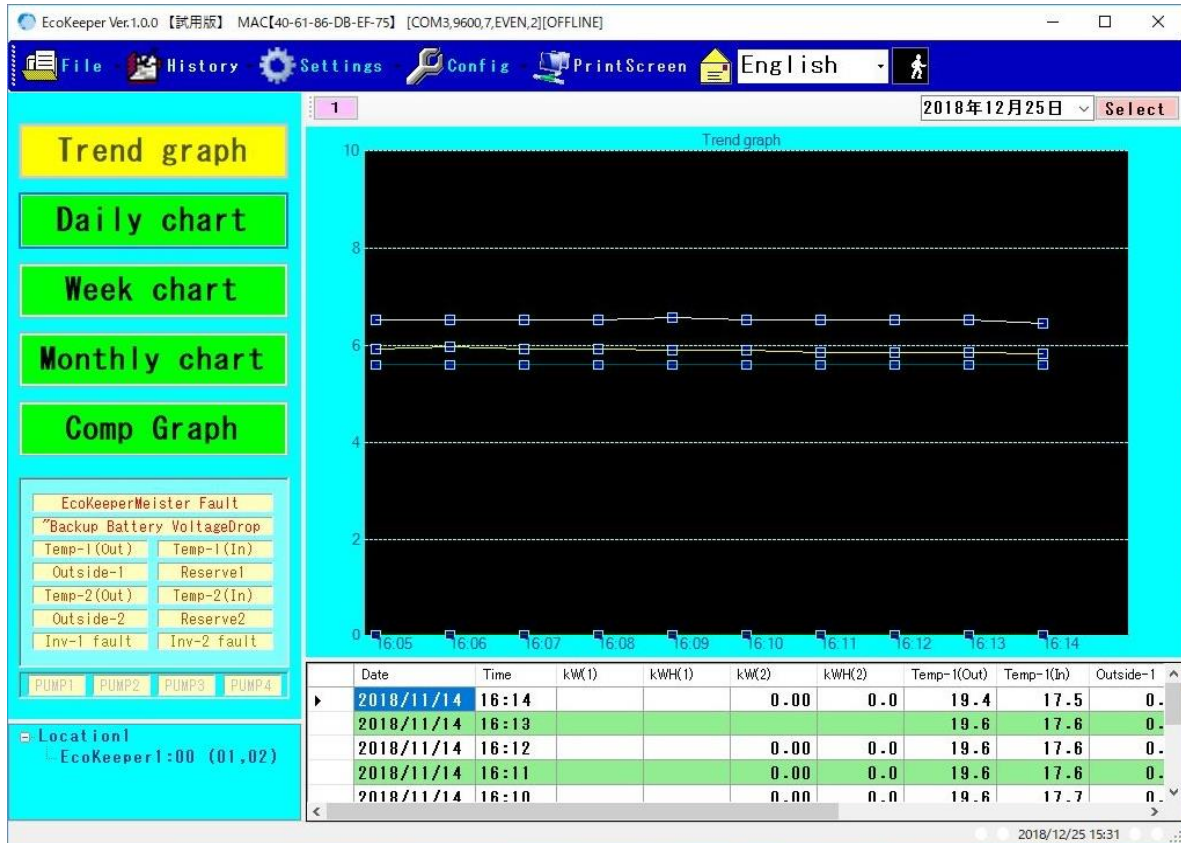

2.2 Menu bar items


2.2.1 File



1.Import Data


This function reads the content recorded in the external format in the future into EcoKeeperWatcher.

When you click "External data reading", the folder selection screen shown below will be displayed.

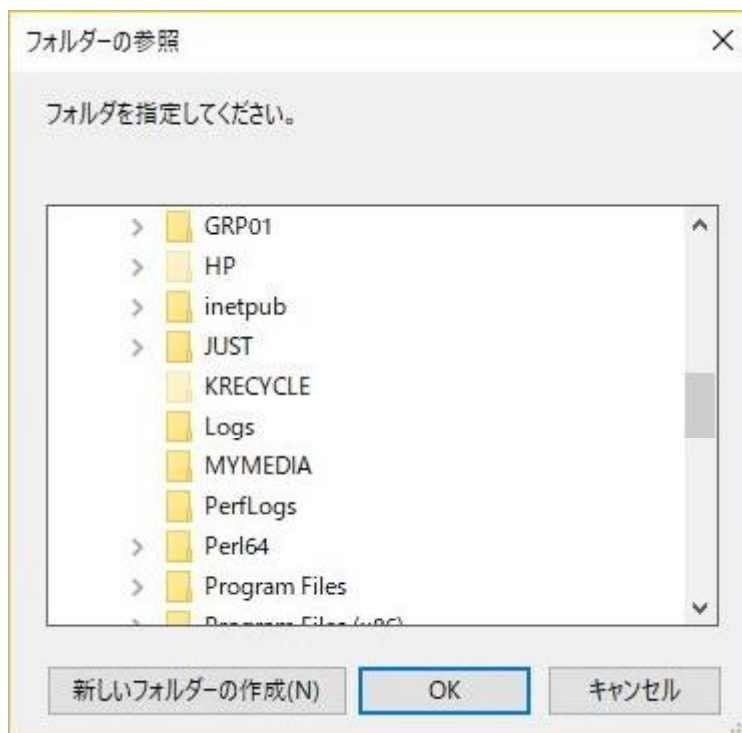


- If you select a folder here, CSV file in that folder will be read.
-
- 2. Exit
- · Click "Exit" to end the program.

2.2.2 History

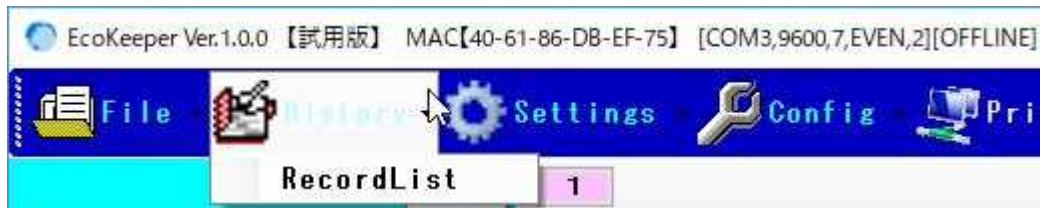

The alarm history allows you to view the history of occurrence of alarms from the list.
(this functions are provided in the future.)

Select "Alarm History" from the menu above and the following screen will be displayed.

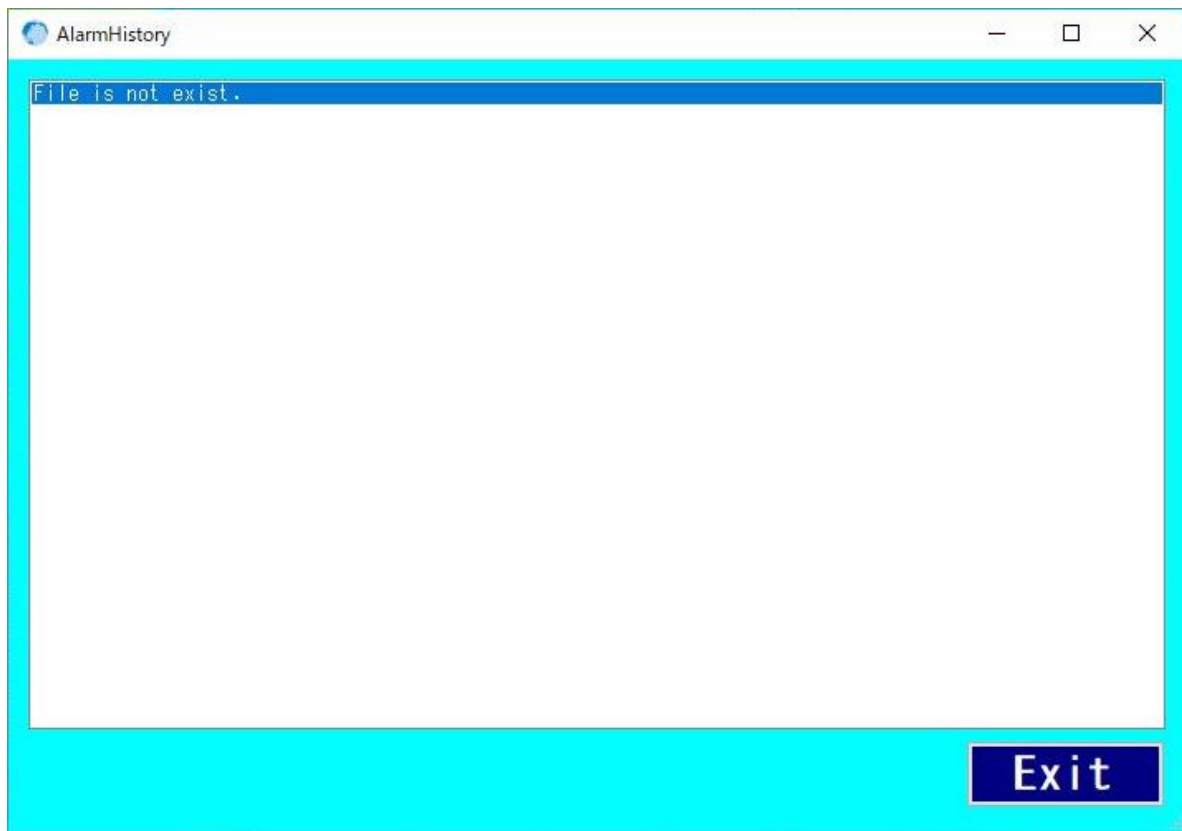


Currently, it is displayed as above.

2.2.3 Settings



On the menu, if you select "Online", you will see an "Online" menu checked in the place of.

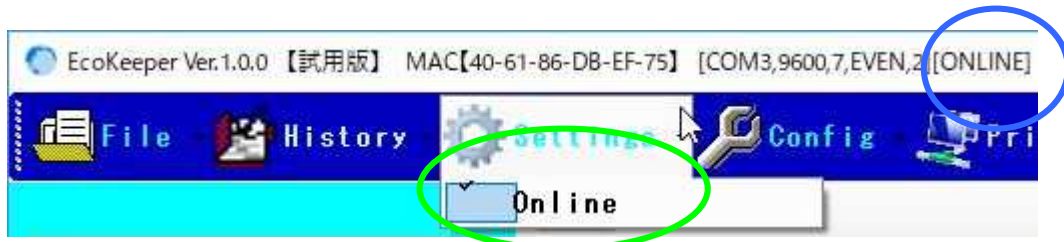


Furthermore, "ONLINE" is displayed in the title bar at the top of the screen.

The checked state indicates that it is in online mode.

In online mode, communicate with EcoKeeper and Power Meter and collect data.

To cancel the online mode, click again on the "Online" menu.

The screen below is the menu screen in offline mode.

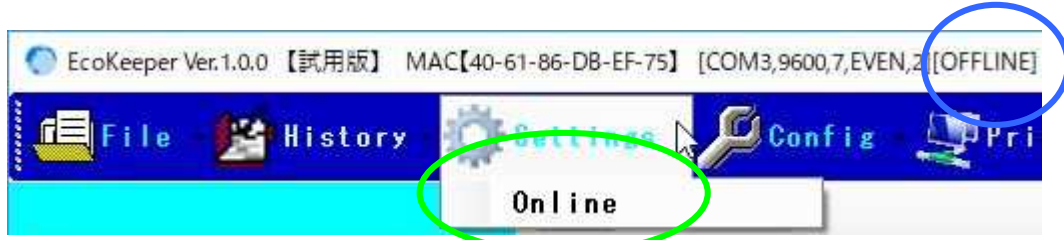

The "Online" part of the menu is unchecked,

"OFFLINE" is displayed in the title bar at the top of the screen.


In offline mode, communication with EcoKeeper and Power Meter is not performed.

When starting this program, it is Offline mode.


However, if you set the item "Online automatic online mode" to "Online" in the basic setting of configuration, it will be online at startup.

2.2.4 Config

On the Config menu, the "Config" menu is displayed.

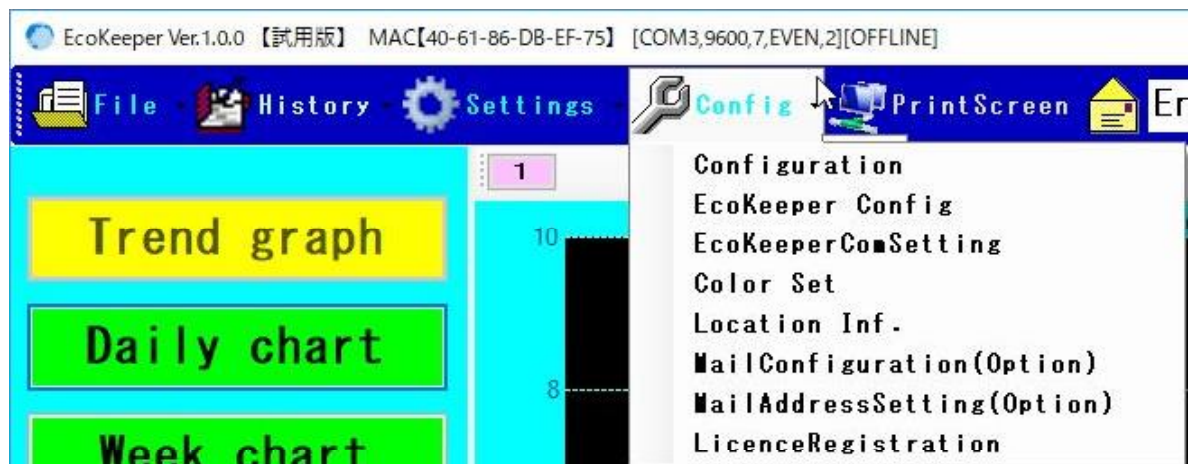

1. Configuration

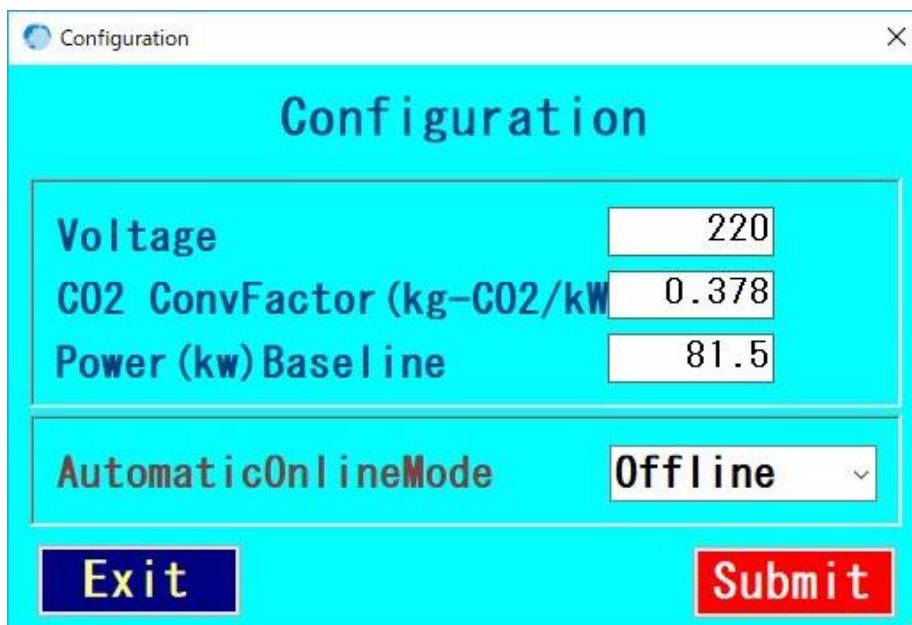

When you select the Configuration, the above screen will be displayed.

In the current version, "voltage" and "CO2 conversion factor" are not used elsewhere, "Power (KW) reference line" draws the reference line for the reference in the graph display.

※Automatic online mode

Select EcoKeeperWatcher's online / offline mode at startup.

※Submit


Submit the operation on this screen and return to the main screen.

※Exit

You will return to the main screen.

2. EcoKeeper Config

In the Config menu, when you select "EcoKeeper Config", the following screen will be displayed.

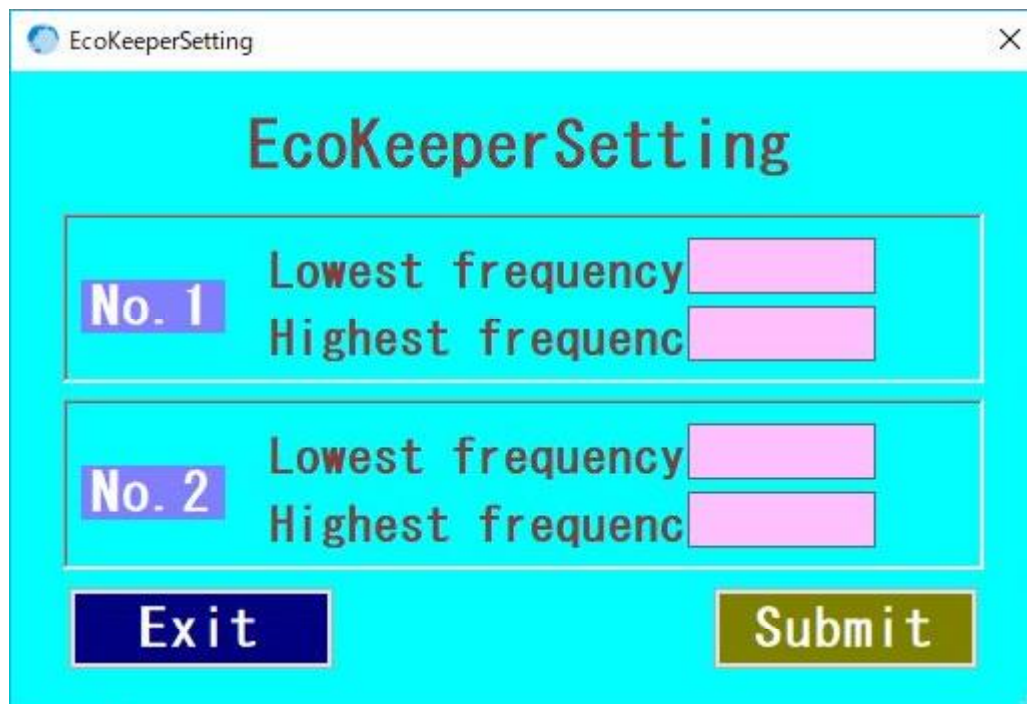

The screenshot shows a window titled "EcoKeeperSetting" with a close button (X) in the top right corner. The window has a light blue background. The title "EcoKeeperSetting" is displayed in a large, bold, black font at the top center. Below the title, there are two distinct sections, each enclosed in a rounded rectangle. The first section is labeled "No. 1" in a blue box on the left. To its right, the text "Lowest frequency" is followed by a pink rectangular input field, and "Highest frequency" is followed by another pink rectangular input field. The second section is labeled "No. 2" in a blue box on the left. To its right, the text "Lowest frequency" is followed by a pink rectangular input field, and "Highest frequency" is followed by another pink rectangular input field. At the bottom of the window, there are two buttons: a blue button labeled "Exit" on the left and a green button labeled "Submit" on the right.

When "EcoKeeper Config" is selected in the menu, the above screen will be displayed. The lowest frequency (1), the highest frequency (1) and the lowest frequency (2), the highest frequency (2) can be setting here. The setting items are preset at the time of shipment and adjusted to the optimum value. Therefore, basically here ,there is no need to set it.

※Submit


At the same time as saving the set value, send the setting parameters to EcoKeeper.

※Exit

You will return to the main screen.

3. EcoKeeper ComSetting

In the Config menu, by selecting "EcoKeeper ComSetting", the following screen will be displayed.

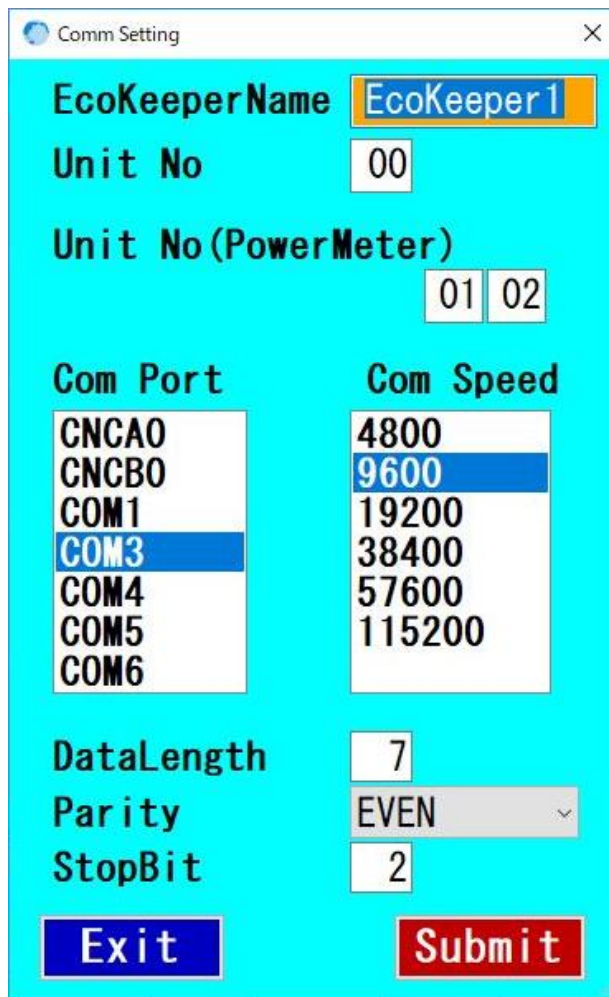

Comm Setting

EcoKeeperName EcoKeeper1

Unit No 00

Unit No(PowerMeter) 01 02

Com Port	Com Speed
CNCA0	4800
CNCB0	9600
COM1	19200
COM3	38400
COM4	57600
COM5	115200
COM6	

DataLength 7

Parity EVEN

StopBit 2

Exit Submit

※EcoKeeper name

You can freely set as EcoKeeper name in this software

※Device number

Specify the device number of RS-485 of EcoKeeper.

※Equipment number (PowerMeter)

Specify the equipment number of the RS-485 of the Eco Power Meter.

※COM Port

Specify COM port of communication port RS-485 (USB-RS485).

※Com Speed

Specify the communication speed with EcoKeeper and the Eco Power Meter.

※Data Length

Specify the data length of RS - 485 communication.

※Parity

Specify the parity of communication of RS-485.

※Stop bit

Specify the stop bit of RS - 485 communication.

The above setting value has been set in advance. There is almost no need to set it.

It is necessary to set only "Com Port" here. Communication (COM) port field can be selected by list of COM ports displayed, from which you select the communication port of the USB

- RS-485 conversion cable.

Note) Before communicating with EcoKeeper/Eco Power Meter, necessary to set EcoKeeper Config and ComSettings.

4. Color set

In the Config menu, select "Color Set".The following screen will be displayed.




The image shows a software window titled "ColorSetting" with a close button (X) in the top right corner. The window has a cyan background. At the top, the title "ColorSetting" is displayed in a large, bold, black font. Below the title, there is a table of color settings. Each row contains a label, a color swatch, and a "Set" button. The settings are arranged in two columns. At the bottom of the window, there are two large buttons: "Exit" (blue with white text) and "Submit" (red with white text).

Label	Color Swatch	Set Button
Form Back	White	Set
GraphBack	Black	Set
FaceColor1	Dark Blue	Set
FaceColor2	Dark Blue	Set
Ref line	Brown	Set
LetterColor	Dark Blue	Set
GridColor	Light Cyan	Set
Line basic	Light Cyan	Set
Temp-1(Out)	White	Set
Temp-1(In)	Yellow	Set
Outside-1	Yellow	Set
Reserve-1	Light Cyan	Set
Temp-2(Out)	Light Cyan	Set
Temp-2(In)	Pink	Set
Outside-2	Gray	Set
Reserve-2	Green	Set

You can set each color on the screen.The above screen shows the default color.

5. Location inf.

In the Config menu, when you select "Location Inf.", the screen to register "Location" is displayed as shown below.

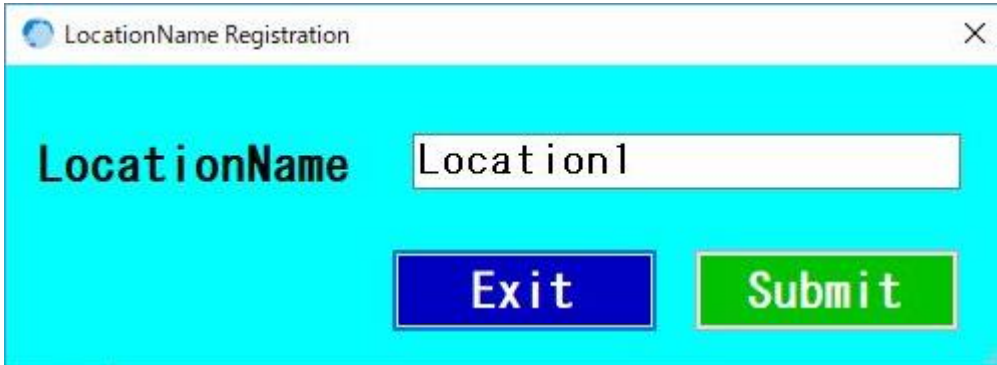

The screenshot shows a window titled "LocationName Registration" with a close button (X) in the top right corner. The window has a cyan background. On the left, the text "LocationName" is displayed in a large, bold, black font. To its right is a white text input field containing the text "Location1". Below the input field, there are two buttons: a blue button with the text "Exit" and a green button with the text "Submit".

Register the name of the place where EcoKeeper will be installed here.
The name registered here is displayed around the lower left of the main screen.

※Submit

After registering the input location name, return to the main screen.


※Exit

You will return to the main screen.

6.MailConfiguration(Optional function)

In the Config menu, select "Mail Configuration",

The screen for registering MailConfiguration appears as shown below.

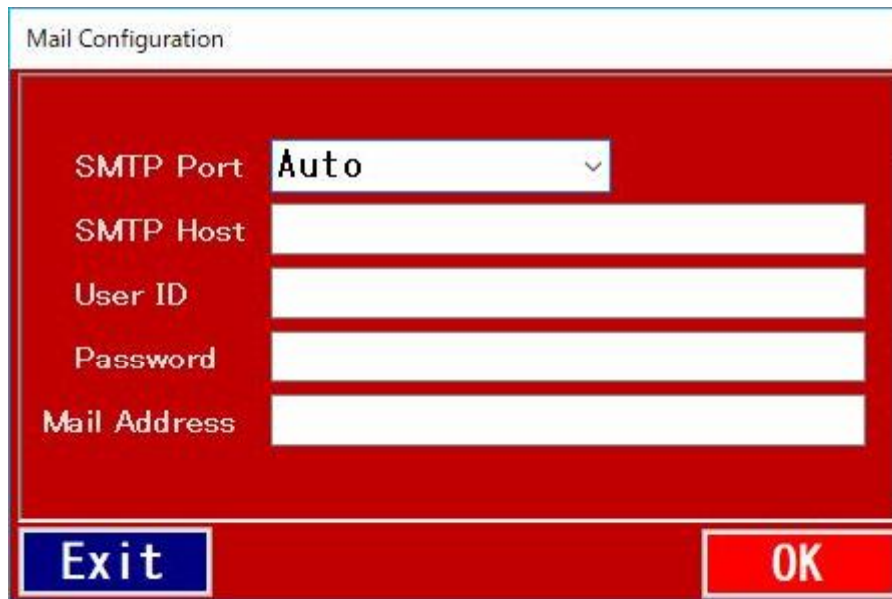The image shows a 'Mail Configuration' dialog box with a red background. It contains five input fields: 'SMTP Port' with a dropdown menu showing 'Auto', 'SMTP Host', 'User ID', 'Password', and 'Mail Address'. At the bottom, there are two buttons: 'Exit' (blue with white text) and 'OK' (red with white text).

※SMTP port

Enter the port of the mail server to use.

※SMTP host

Enter the host name of the mail server.

※username

Enter the user ID required for sending mail.

※Password

Enter the password.

※mail address

Enter the sender's e-mail address.

※Submit

After registering the entered information, return to the main screen.

※Exit

You will return to the main screen.

7.MailAddressSetting(Option function)

In the Config menu, when you select "MailAddressSetting",

The screen for registering the destination mail address is displayed as shown below.

The screenshot shows a screen titled "Destination MailAddress Regist." with a yellow background. It contains eight input fields labeled DestAdr1 through DestAdr8, arranged vertically. At the bottom, there are two buttons: a blue "Exit" button on the left and a red "Submit" button on the right.

You can register up to 8 recipients' mails.

In order to send mail, you need to register at least one destination.

※Submit


After registering the entered information, return to the main screen.

※Exit

You will return to the main screen.

8. LicenseRegistration

In the Config menu, when you select "LicenseRegistration,
The screen for registering license information is displayed as shown below.

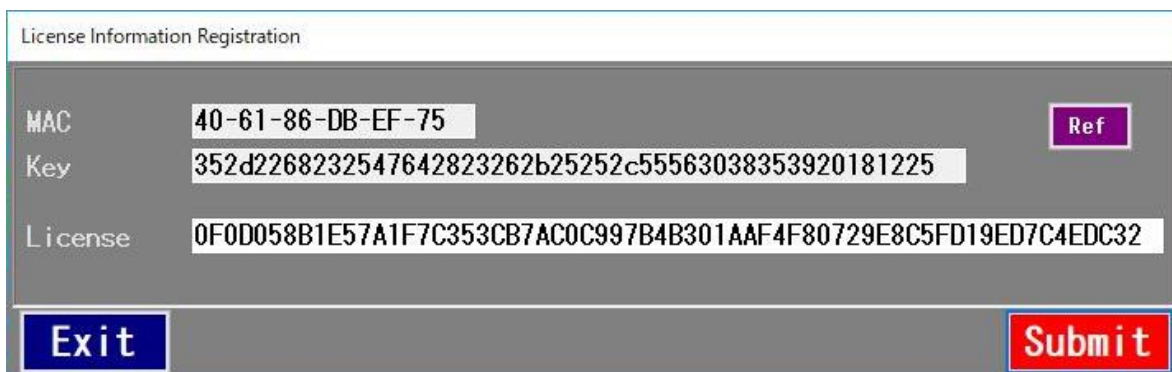

License Information Registration	
MAC	40-61-86-DB-EF-75
Key	352d2268232547642823262b25252c55563038353920181225
License	0F0D058B1E57A1F7C353CB7AC0C997B4B301AAF4F80729E8C5FD19ED7C4EDC32
<div>Exit Submit</div>	

In this software, license management is one license per PC, by manage MAC address of that PC.

The MAC address and Key information are displayed in advance.

When you send MAC address and key information to us, we obtain license information corresponding to it

Since we will send it back, please put that information in the "License" field and register it

License registration action will be completed.

※Submit

After registering the entered information, return to the main screen.

※Exit

You will return to the main screen.


2.2.5 Hard Copy of Screen

On the main screen menu, there is "Screen hard copy" as shown below.



Click "Hardcopy of screen", the main screen will be printed on "Printer normally used".

2.2.6 Send Test Mail (Option function)

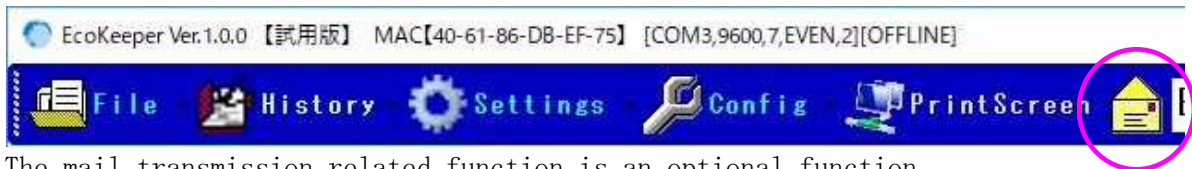

The mail transmission related function is an optional function.

(This function is not supported in the standard version)

When you click the “Send Test Mail” icon on the menu bar above, the screen is displayed as shown below.

The image shows a dialog box titled 'Send Test Mail'. It has three main input fields: 'Title' with the text '【テストメール】', 'Body' with the text '送信テストを行います。', and 'Destination Address List' which is currently empty. At the bottom of the dialog, there are two buttons: 'Exit' on the left and 'Start' on the right.

As shown above, the contents are displayed in the “Title” and “Body” fields beforehand. The destination address registered in the mail destination setting is displayed in the destination list.

✖Send


After sending the Test Mail, return to the main screen.

✖Exit

You will return to the main screen.

2.3 Changing graph display in graph display

There is a "1" button at the upper left of the graph display area as shown below.

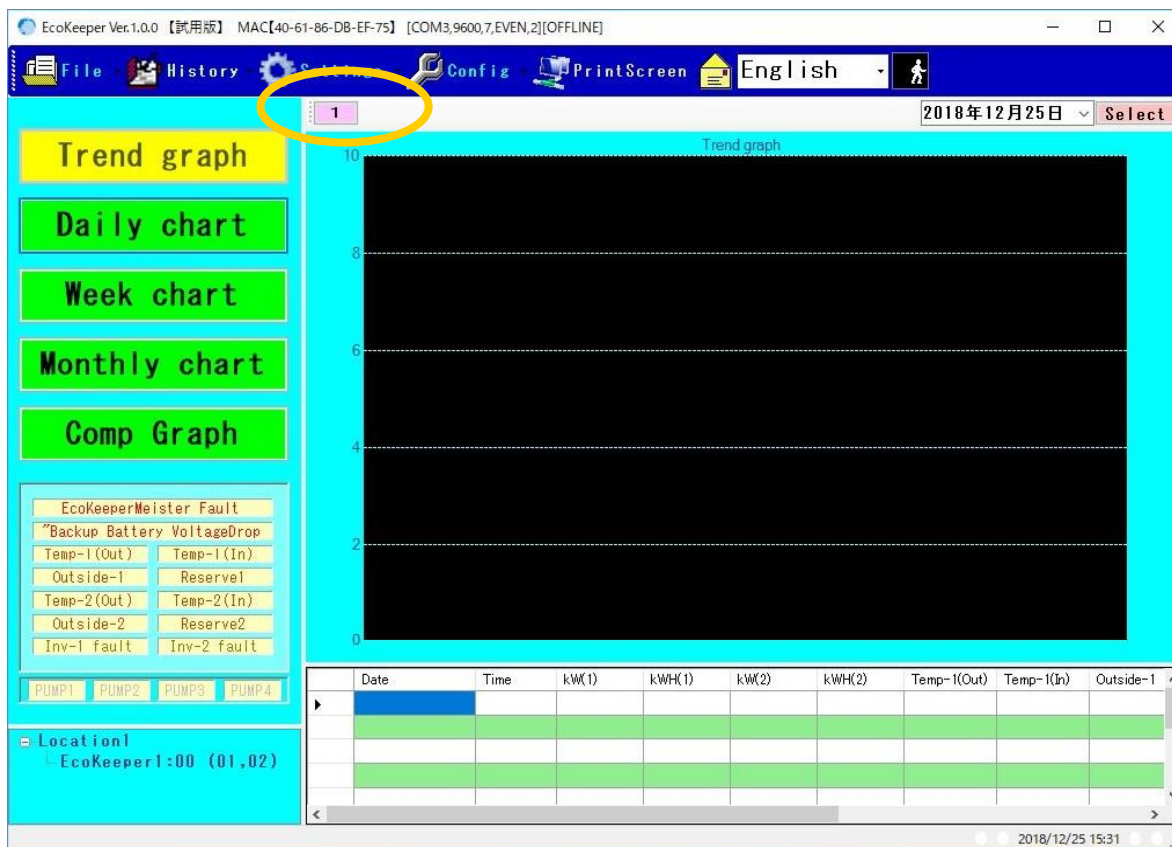

By clicking the "1" button, the button display is like "1" -> "2" -> . . .

It switches in 4 steps.

- [1] Power KW1 and KW2 (Power Meter value)
- [2] Temperature (Recipient & Outside Air) Display (EcoKeeper Measurement Value)
- [3] Power KW1, KW2 and Temperature display (EcoKeeper & Power Meter value)
- [4] Power amounts KWH1 and KWH2 (Power Meter values)

By clicking on "1" - "4" the button display changes as shown below.




Also, if you drag the mouse over the button, the explanation about the button is shown around the lower right of the button.

Appendix 1 . About specification of COM port

1.With the RS - 485 USB cable in place, check the corresponding COM port.

(Start -> right - click on My Computer - Properties -> Hardware tab -> Device Manager)

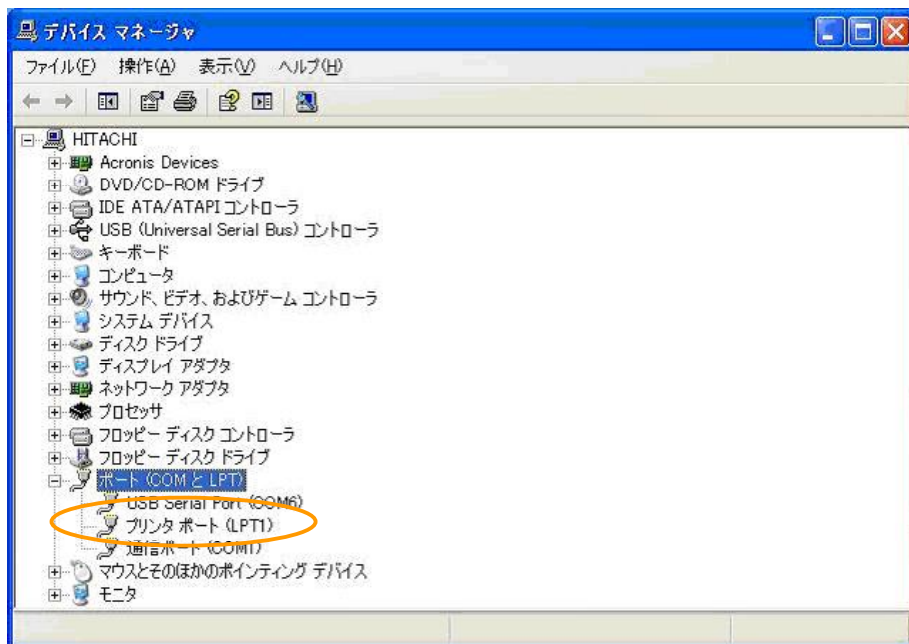

2.Com Setting screen of EcoKeeper Watcher.

The screenshot shows the 'Comm Setting' window of the EcoKeeper Watcher. The fields are as follows:

Com Port	Com Speed
CNCA0	4800
CNCB0	9600
COM1	19200
COM3	38400
COM4	57600
COM5	115200
COM6	

Other fields: EcoKeeperName: EcoKeeper1, Unit No: 00, Unit No (PowerMeter): 01 02, DataLength: 7, Parity: EVEN, StopBit: 2. Buttons: Exit, Submit.

Specify "COM 6" as the "communication port" on the right side of the screen and click "Submit".